

Dual 4"× 6" Recording Picture Frame

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Dual 4" × 6" Recording Picture Frame has separate recording and play buttons for added convenience. You can record and play back up to 10 seconds of sound to accompany each of your favorite pictures. Its recorder uses the latest integrated circuit recording technology, so you can record a new message as many times as you like without having to wait for a tape to rewind. You can choose a horizontal or vertical display of the frame.

REMOVING THE BATTERY INSULATION STRIP

To prevent battery drain during shipping, your recording picture frame is shipped with an insulation strip that you must remove before use. To remove the strip, firmly grasp the slip by its end and gently pull it out.

FRAMING A PICTURE

1. Open the picture frame.
2. Place the picture frame vertically on a flat surface then press the button on the top of the picture frame to pop out the inner picture frame.
3. Turn the inner picture frame over and slide down the metal plate until its six slots align with the six holding tabs on the back of the inner frame. Then lift off the metal plate. Remove the sample picture.
4. To frame a 3" × 5" picture, place it on the silver framed plate.

To frame a 4" × 6" picture, slide off the silver framed plate and place the picture in the frame, then slide the silver framed plate from the bottom of the picture frame all the way up until it stops.

5. Position the metal plate with its two convex ribs facing up, then align its six slots with the six holding tabs on the picture frame and push the plate all the way up until it stops.

Note: If you do not push the metal plate all the way up, it is difficult to replace the picture frame snugly onto its holder in the next step.

6. Insert the inner picture frame's three locking tabs into the matching slots on the bottom of its holder, then press the top of the inner frame down until it clicks securely into place.
7. Repeat Steps 2–6 for the other inner picture frame.

RECORDING A MESSAGE

Follow these steps to record a 10-second message for each picture frame.

1. Open the picture frame and hold it about 6 inches (15 cm) away from your mouth or the sound source.
2. Use the tip of a pen (or other pointed object) to hold down **REC**. The recording indicator lights and recording begins.

3. Speak into **MIC**. After 10 seconds, recording stops automatically and the recording indicator goes off. To stop recording sooner, release **REC**.

Repeat these steps to record a new message. The new message replaces the old one.

PLAYING THE MESSAGE

Press **PLAY** to listen to the message. When playback finishes, the recording indicator flashes once.

PLACING THE PICTURE FRAME

You can place the picture frame vertically or horizontally on a desk, shelf, or table.

To place the picture vertically, open and extend the picture frame, then place it on a flat surface.

To place the picture horizontally, open the picture frame as far as it can go, then place the picture frame on a flat surface.

REPLACING BATTERIES

Your recording picture frame comes with four type 357A alkaline button-cell batteries installed. When the sound weakens, replace the batteries. For the best performance and longest battery life, we recommend RadioShack alkaline batteries. The recorder continues to store the recorded message even if it loses battery power.

Warnings:

- Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.
- Dispose of old batteries promptly and properly. Do not burn or bury them.

Cautions:

- Use only fresh batteries of the required size and recommended type.
 - Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
1. Use a mini Phillips screwdriver to remove the two screws on the battery compartment cover on the hinge's back, then lift off the cover.
 2. Remove the old batteries. Place the fresh batteries in the compartment as indicated by the polarity symbols (+ and –) marked inside.
 3. Replace the cover and secure it with the screws.

CARE

Keep the frame dry; if it gets wet, wipe it dry immediately. Use and store the frame only in normal temperature environments. Handle the frame carefully; do not drop it. Keep the frame away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the frame's internal components can cause a malfunction and might invalidate its warranty. If your frame is not performing as it should, take it to your local RadioShack store for assistance.

SPECIFICATIONS

Power Requirement	Four Type 357A Button-Cell Batteries
Battery Life	About One Year
Recording Time.....	10 Seconds/Each Photo
Operating Temperature	32–104°F (0–40°C)
Dimensions (Folded) (HWD).....	7 ⁷ / ₈ × 6 ¹ / ₈ × ³ / ₄ Inches (200 × 156 × 19 mm)
Weight.....	15.7 oz (445 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99